

A-XPOL-0016

Packing Check List

Item	Description	Quantity
For A-XPOL-0016		
1.	A-XPOL-0016 Antenna	1
2	High gain ground plane	1
Bracket Components		
1	M6x60mm U-Bolt ss	1
2	Econo Bracket ss	1
3	M6 Nuts ss	2
4	M6x12mm Bolts ss	4
5	M6 Washers ss	6
6	Z-Bracket	1
7	Backing Plate	1

Installation Instructions

1. Insert the Z-Bracket into the slot shown below of the ground plane, figure 1.
2. Attach the ground plane, z-bracket and backing plate to the back cover of the antenna using the four provided M6 washers and M6x12mm bolts as shown in figure 2.
3. Mount the antenna onto the pole using the provided econo bracket and fasteners as shown in figure 3.

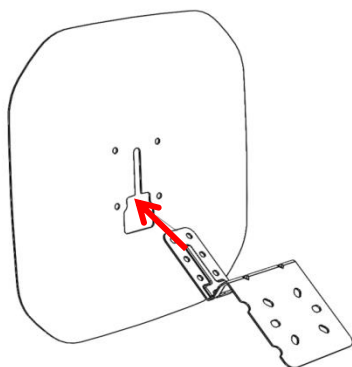


Fig: 1

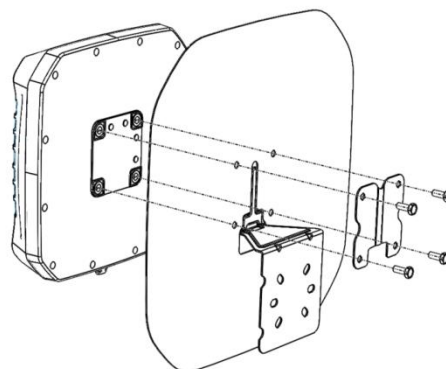


Fig: 2

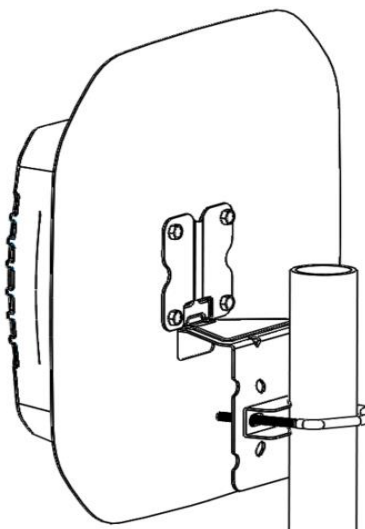


Fig: 3